



USER'S MANUAL

ProSense Pro
ProSense Compact

First steps	2
Kit contents.....	2
Device assembly and setup.....	3
Quick scent dosing time change	4
Main menu	5
Accessing the main menu	5
Main menu structure	6
Programming example	7

 
First steps

Kit contents

Received device consists of:

1. ProSense Pro / ProSense Compact device – 1 pc.
2. scented liquid in a 500 ml bottle – 1 pc.
3. AC adapter 12V – 1 pc.
4. diffuser – 1 pc.
5. keys to the device – 2 pcs

OPTIONAL: short or long silicon tube – 1 pc.

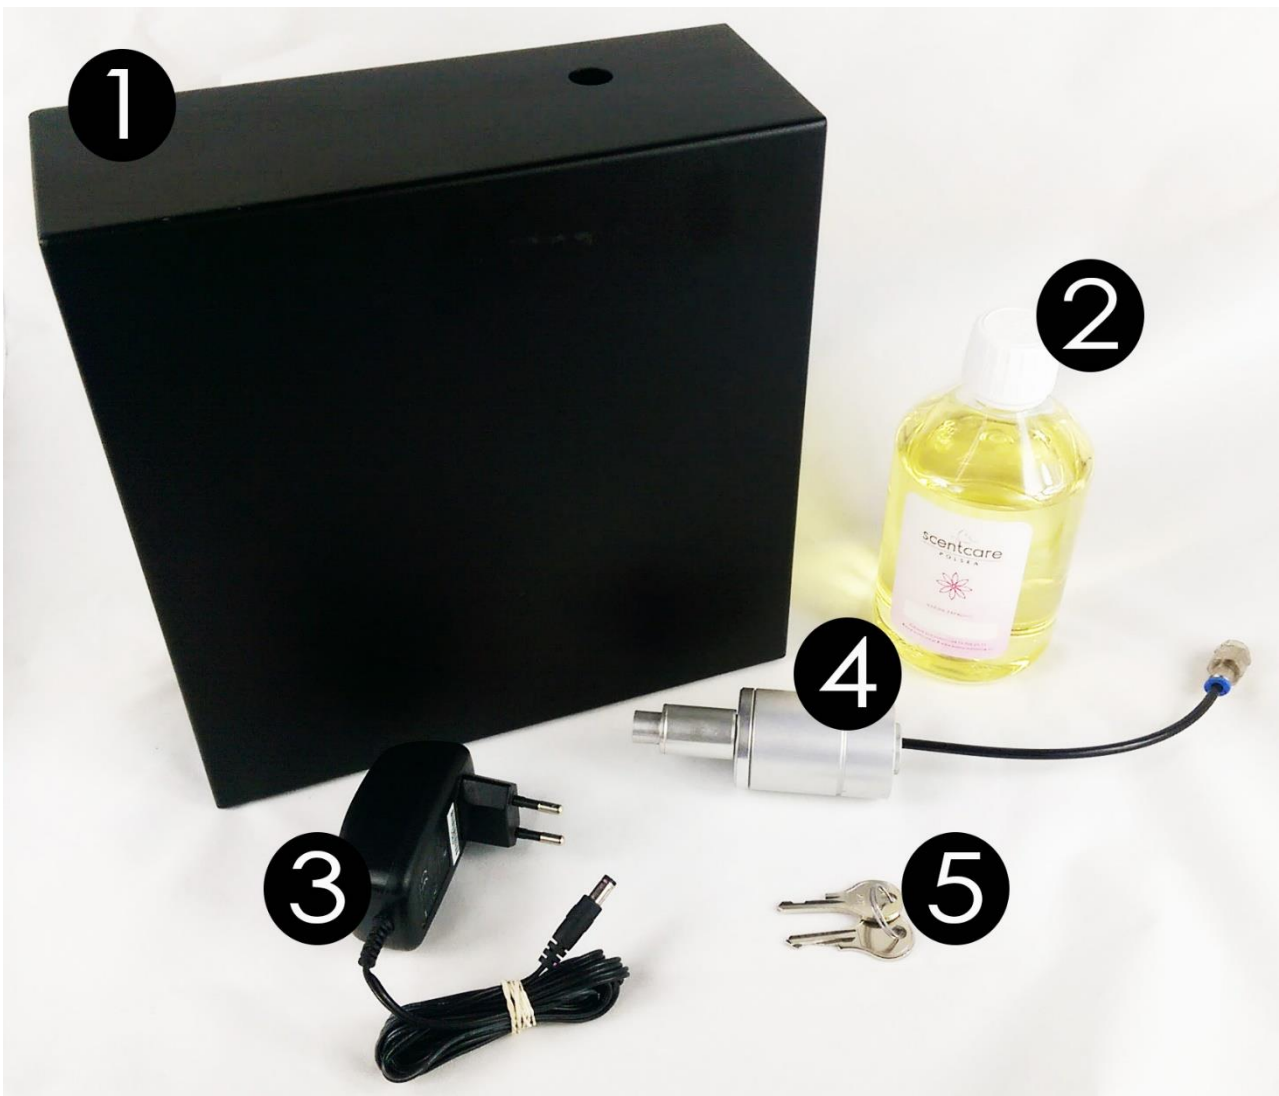

Device assembly and setup

Use the keys to open the device.

Next open the bottle with scented liquid (2). Install the diffuser on the top of the bottle (4). Please note that the tube inside the bottle cannot be twisted too much and should be resting on the bottom of the bottle.

Take the tube coming from the device and connect it to the diffuser (please check afterwards that tube is securely connected by gently pulling it off the diffuser), then place the bottle inside the dedicated slot.



Now you can close the device, plug the AC adapter to the device first and then to power socket.

The device should automatically start and run the last selected program.

CAUTION!

**Do not flip the device with bottle inside to prevent device damage due to the liquid leakage.
Please remember to remove the bottle prior to the transport or storage.**

When turned on, the device's display will show current date and time, program's number and remaining time of work ("Run") or waiting ("Wait").



You can turn off the device by pressing and holding the **C ON/OFF** button (no program will be activated).

ProSense device can be shut down completely only after disconnecting the power source. Please note that leaving it without the power connected for long periods of time can cause internal battery to discharge and reset the memory. You may have to reprogram the device if that happens.

 
Quick scent dosing time change

In order to quickly change the scent dosing time for a current program, press the **+** button.

ProSense will display the current setup:




Use the **+** **-** buttons to change the program (Prg1 - Prg8) and **OK MENU** button to select.

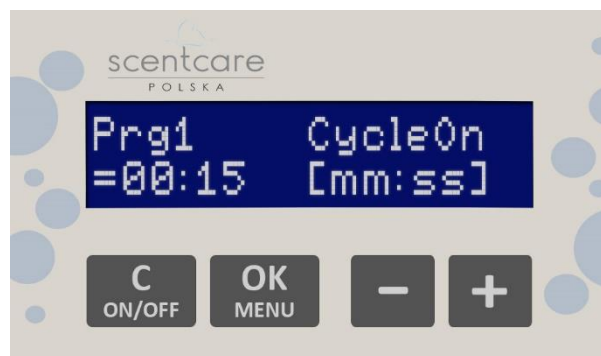

Flashing timer means you can set up the duration of the scent dosing with **+** **-** buttons.

Press the **OK MENU** button again to confirm.

 Now, use the **+** **-** buttons again to set up the pause time (also confirm with **OK MENU** button):

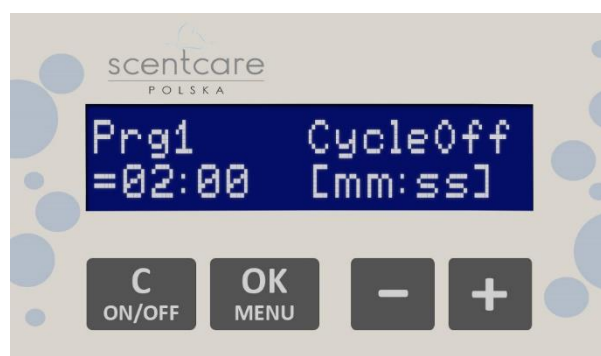

Main menu

 
Accessing the main menu

ProSense device has advanced steering module with the setup already programmed according to the Customer's needs. If you find changing programs necessary anyway, you can do that by accessing the Main Menu, which is password protected by default (to prevent any unnecessary changes).

WARNING!


Any changes you will make are at on your own risk!

To access the main menu, press and hold the  button for 2-3 seconds, while in the standby mode. The device should display following:

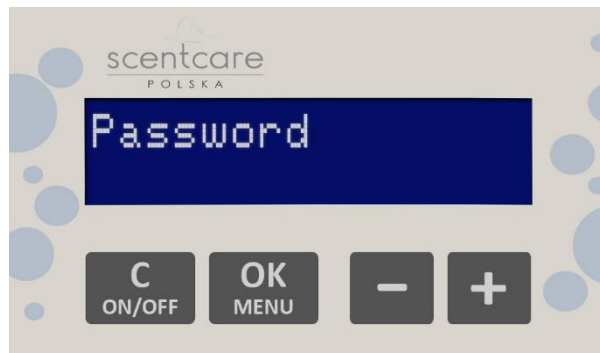



 
Release the  button and press it again without holding it down this time.

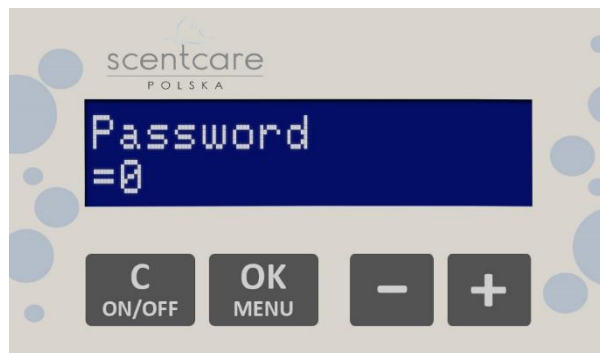You should see now a flashing „0” digit:




Use the  button twice to display „2”, then  button once (back to “1”) and press .

You should have access to the main menu now, which you can navigate using   buttons.

Use  button to select an option.





Use   buttons again to change the selected option setup.

 
Confirm by pressing  button.


 

Main menu will disappear automatically after 20 seconds inactivity but the password will be stored for 5 minutes. During this time, main menu can be accessed again simply by pressing & holding  button for 3 seconds.

Main menu structure



After pressing  button you will see flashing time (hour) which you can modify using   buttons. Press OK to confirm and access the minutes setup. Press  again to setup current date (year, month, day).

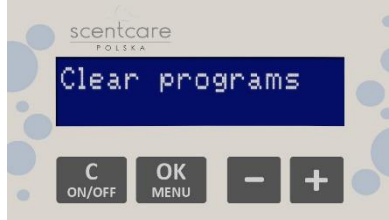

After pressing  button a „Clear programs” option will be displayed. Use  button to change it to “Yes” and  button to confirm. This will erase the memory and you will have to enter at least one program before using the ProSense again.






You can store up to 8 programs in ProSense. You can set up the working days and hours for each one of them.

...





You can use it to program different cycle for each day of week. Example: one program Monday-Friday and another one for Saturday. That will allow ProSense to be active only during working hours of your store.



Scent dosing time, while ProSense will emit the fragrances in currently selected program. By pressing  button you can edit the duration of this time with   buttons.

 


Pausing time, while ProSense will hold and do not emit any fragrances. Change the duration using   buttons.

Programming example

Access the Main Menu (see page 5).

Use the **+** button to select desired program:

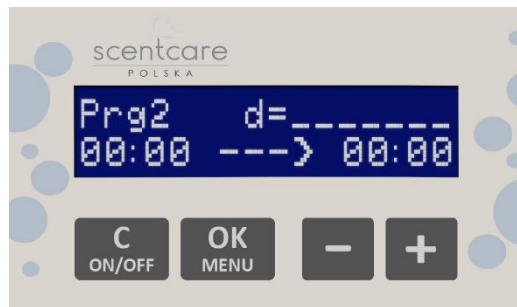

Press **OK MENU** button to access the weekdays setup. Example: our store is closing earlier on Wed and Sat (09:00 – 14:00 only). By pressing **OK MENU** button twice, you can access the third day of the week (Wednesday) and schedule program for that day by pressing **+** button. If done correctly, the “W” letter will appear. Confirm by pressing **OK MENU** and use that button again to select 6th day of the week (Saturday). Activate the schedule on Sat using **+** button and confirm by pressing **OK MENU**.

Using **OK MENU** button go through the rest of the week and into the time setup.

Every flashing digits can be changed with **-** **+** buttons and confirmed with **OK MENU** button.



After confirming, go through the remaining setup for working time and pausing time.



ProSense is now ready to work! Scheduled programs will be applied after approx. 20 seconds (you can also exit the Main Menu by pressing **C ON/OFF** button). Please keep in mind that the device will prioritize programs by its order. That means, if you will set up more than 1 program for Wed and Sat, ProSense will only use the schedule from the 1st one. Avoid scheduling the same time periods in different programs.